



Still Note Panel Installation

Cutting

Polyester wool can be cut with a sharp ceramic knife, scissors, filament, band saw, or foam saw.

Fixing

iKoustic recommends that the panels are installed using contact spray adhesive. The panels can also be installed using mechanical fixings.

Maintenance

The surface can be easily cleaned with a vacuum cleaner and a soft brush.


Spray Adhesive

Surface Preparation

The surface, (concrete, brickwork, wood, plaster or metal), must be clean, dry and free from loose paint or plaster, dust, oils grease etc. Wallpaper should be fully removed, gloss paint roughened and emulsion paint brushed with a stiff brush to ensure it is firm. On absorbent surfaces, an initial priming coat of spray adhesive may be necessary. Wall or ceiling surfaces must be flat and level.

Fixing Panels

Mark the position of the panels on the wall. Spray the contact adhesive on the back of the panel and also on the designated wall area. Apply the adhesive vertically on the panels and horizontally on the wall area. Allow the adhesive to dry for approximately 1-2 (tack time) minutes at room temperature before bringing the two surfaces into close contact, apply light even pressure using a clean pad or roller.

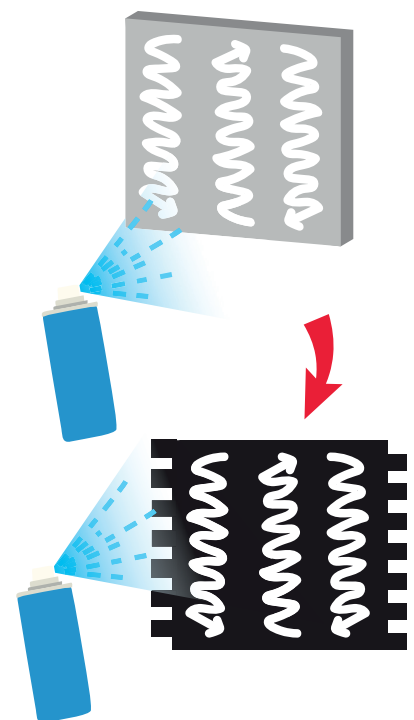

We do not recommend using this fixing method on ceilings with panels larger than 1200x1200.




Still Note Raft

Installation

Rafts and panels can be suspended from ceilings using adjustable suspension hooks and fixation twists.

Fixings come in three variations; with a single wire and hook, with three wires and hooks or with four wires and hooks.

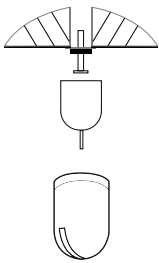


Base

Attach the base to the ceiling. Insert the wire into the cap and screw it to the base.



Termination & Rope

Ø 1mm wire. Wires of 1m or 2m.

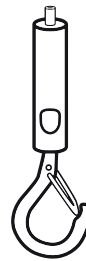

Hook

Block wire. Wire lock with safety catch.




Fixation Twist

Connect the panel to the suspension kit.


Spiral anchors are used for ceiling applications by suspension cables and adjustable suspension hooks.

Hooks are fitted into the rear of the Soft Note panels and can then be suspended.

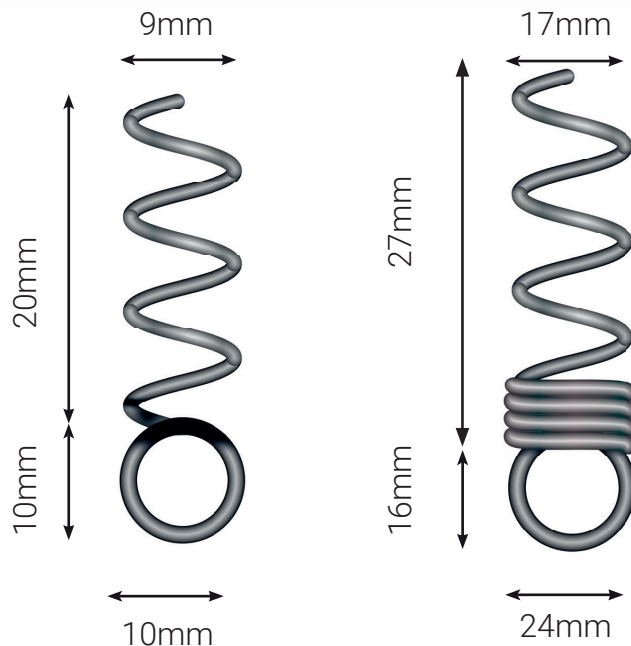

Twist Fixings

Spiral hooks should be placed a minimum of 150mm away from the edge of the panel.

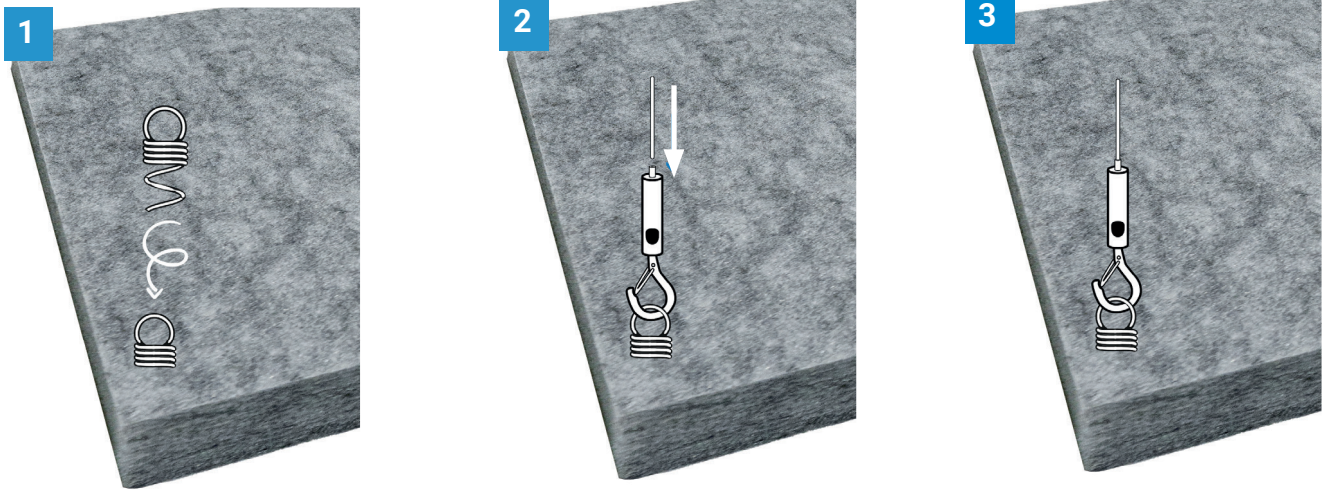

Recommended number of fixing points for horizontally suspended panels:

< 1200mm

↓	150				150	↓
150						150
→						←
→						←
150						150
↑	150				150	↑

1200mm - 2400mm

↓	150							150	↓	
150		←	Ω	→		←	Ω	→		150
→										←
→										←
150		←	Ω	→		←	Ω	→		150
↑	150							150	↑	