

MuteMat® 2/3

Installation Guide.


Installing MuteMat®
01 - Carpet Finish
02 - Hard Floor Finish

Installing MuteMat® Carpet Finish.

Preparation.

Skip this page if installing any floor finish other than carpet.

- Clear the floor of any dust, debris, or rubble.
- Let the **MuteMat®** acclimatise in the room for at least 24 hours before installation (if possible).

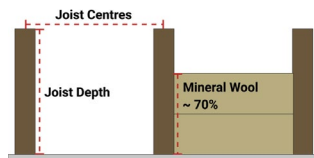

Preparing the Floor Surface.

1. Stick self-adhesive gripper strips around the room edge, leaving a 2–5 mm gap between strip and wall.
2. Seal the gap with acoustic sealant to prevent sound transmission.


Installing MuteMat® 2/3 and Carpet.

1. Lay the **MuteMat®** (loose or glued) in a brick bond pattern.
2. Tape all seams between **MuteMat®** panels with cloth tape.
3. Attach gripper rods to the perimeter strips.
4. Fit the carpet as you normally would; you may also install additional underlay if needed.

Preparing the Perimeter.

If installing MuteMat® on concrete or on top of an existing floor only, skip this section.

1. Fold the perimeter flanking band back over the floor.
2. Cut vertically at room corners to help the flanking band fold neatly.
3. Fit the skirting boards down onto the folded flanking band with light pressure.
4. Trim off any excess flanking band using a sharp utility knife.

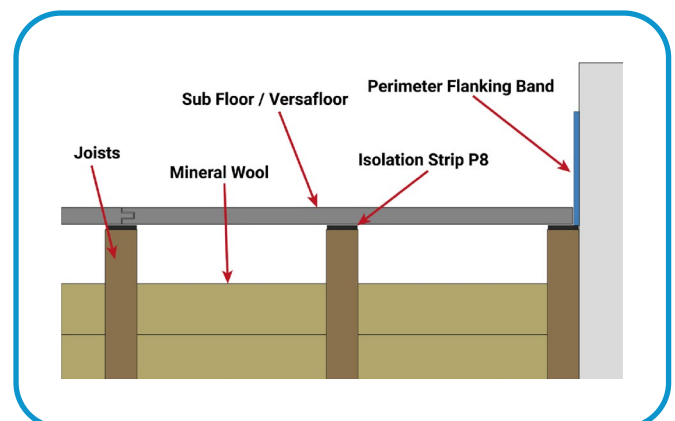

Installing MuteMat® Hard Floor Finish.

Preparation.



- Clear the floor of any dust, debris, or rubble.
- Let the **MuteMat®** acclimatise in the room for at least 24 hours before installation (if possible).

Installing the Plywood Layer (if required).

3. For floor finishes under 18 mm thick, adhere a plywood layer over the **MuteMat®**, overlapping taped joints where possible.
 - Use 12 mm ply for laminate and timber finishes.
 - Use 12 mm ply for vinyl, carpet tile, or tile finishes.

Preparing the Perimeter.

1. Install the perimeter flanking band around the edges of the room if not already in place.
2. Apply the band vertically to the wall, using masking tape if needed. Ensure the apron lies flat on the floor, facing inward.

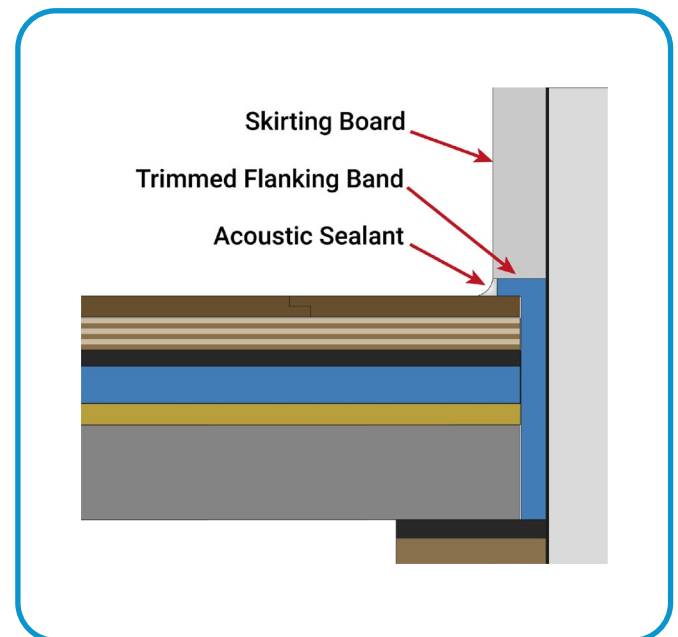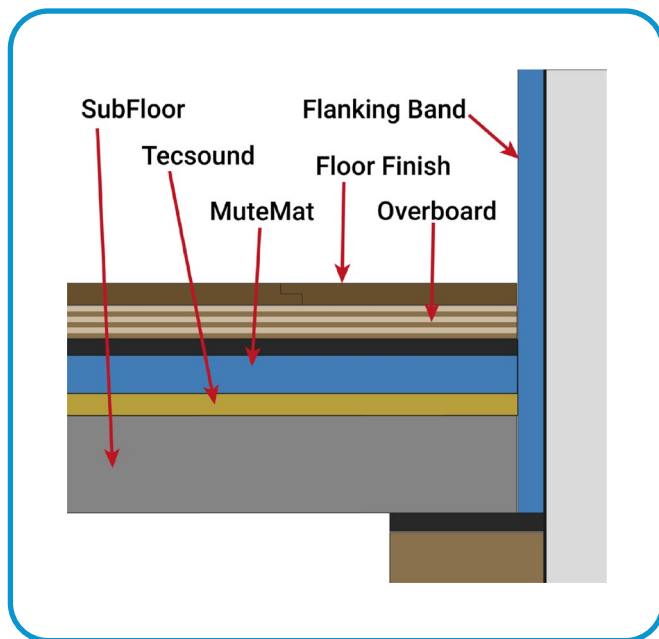

Final Floor Finish and Trimming.

4. Lay the final floor finish, following the manufacturer's guidelines.
5. Fold the perimeter flanking band back over the final floor finish.
 - Slit the flanking band at corners to help fold it neatly.
6. Fit the skirting boards to the perimeter, applying light pressure down onto the folded flanking band.
7. Trim off any remaining flanking band using a sharp utility blade.
8. Seal the remaining gap at the skirting using acoustic sealant.

Laying the MuteMat® 2/3.

1. Lay the **MuteMat®** up to the flanking band in a brick bond pattern, adhering it to the subfloor.
2. Tape all joints between **MuteMat®** panels using cloth tape.